

IsoVent®

IsoVent® filters are available using PTFE media producing a safe sterile rating, allowing the filter to resist aggressive substances

Features and benefits


- Strong particle retention due to natural hydrophobic PTFE micron rating
- 25mm and 50mm diameter
- Manufactured with Borealis polypropylene
- 0.2µm PTFE media or 0.1µm PTFE available on request
- Hydrophobic micro-porous media to resist moisture in gas and air
- Our tampo-printing technology allows us to incorporate your logo onto the filter housing, offering brand marketing opportunities.
- Media is ultrasonically welded
- Tested to withstand up to 50 psi (3.44 bar)



Testing available on request

- Clean pressure drop
- Water-entry-pressure
- Flow rate
- Burst integrity test
- Pressure test

Air Flow Rate for FH0555

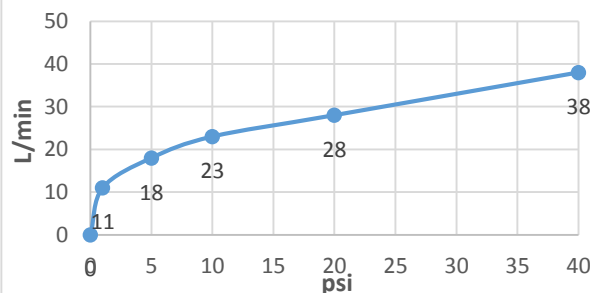

Order	Micron Size	Media	Connector	Size	Sales Unit
FH0595	0.2µm	PTFE	1/8" National Pipe Thread	50mm	50 filters
FH0555	0.2µm	PTFE	1/4" stepped barb	50mm	20 filters
FH0315	0.2µm	PTFE	FLL / MSL	25mm	50 filters